


# Safe DC SDC-M

## Micro-UPS DC

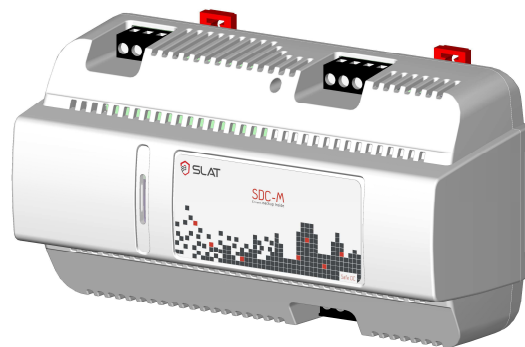

SDC-M 12 V-24 V

DMR

RS

Modbus / BACnet MS/TP



EN Operating Instructions



<b>1. Safety</b>	<b>3</b>
<b>2. Directives and environment and public health protection</b>	<b>4</b>
<b>3. General Information</b>	<b>5</b>
3.1 The company	5
3.2 Purpose of the document	5
3.3 Related documentation	5
3.4 Intended audience	5
3.5 Indicator labels	6
<b>4. The product</b>	<b>7</b>
4.1 Description	7
4.2 Operating principle	7
4.3 Schematic diagram	8
4.4 Product view	8
4.5 Available references	9
4.6 Scope of delivery	9
4.7 Associated products	9
<b>5. Energy storage</b>	<b>10</b>
5.1 Available storage option	10
5.2 Technology	10
5.3 Autonomy curves	11
5.4 Autonomy duration	11
5.5 Self-discharge	11
<b>6. Installation</b>	<b>12</b>
6.1 Positioning / Installation on support	12
6.2 Connection	13
6.2.1 Connection specifications	13
6.2.2 Wiring	13
<b>7. Commissioning</b>	<b>16</b>
7.1 First configuration	16
7.2 Subsequent configurations	17
<b>8. Operation</b>	<b>18</b>
8.1 Local report on product	18
8.2 Remote report	18
8.2.1 Alarm reports	18
8.2.2 Communication	19
<b>9. Maintenance and troubleshooting</b>	<b>25</b>
<b>10. Technical data</b>	<b>27</b>

10.1	Electrical characteristics	27
10.1.1	Electric power supply characteristics	27
10.1.2	Electrical output characteristics	29
10.1.3	Functional characteristics	30
10.1.4	Peak current	30
10.2	Mechanical characteristics	31
10.3	Environmental specifications	31
10.4	Standards	32
10.4.1	Safety standards	32
10.4.2	EMC standards	32
<b>11.</b>	<b>Warranty and Product Returns</b>	<b>33</b>
11.1	Warranty	33
11.2	Product Returns	33
11.2.1	Product under warranty	33
11.2.2	Product not under warranty	34

## 1. Safety

---

These operating instructions contain all the instructions to follow in order to install, commission and operate the **SDC-M** Uninterruptible Power Supply. It is recommended to follow them very carefully to ensure an optimum functioning of the product.

It is vital to read the Safety Precautions before installing or operating this product.

### Safety Precautions:

**SDC-M** is a Micro-UPS DC designed to be connected to the public 110 V / 240 V mains network. It must not be installed outdoors. It ensures continuity of service for equipment in case of power failure. The lithium - ion backup function is integrated into the product.

- An easily accessible two-pole circuit-breaker must be provided upstream.
- To avoid any risk of electric shock, all **INTERVENTIONS** must be carried out with the equipment **SWITCHED OFF** (upstream two-pole circuit-breaker open).
- Interventions with the equipment switched on are authorized only when it is impossible to switch the equipment off. The operation must only be performed by qualified personnel.
- During installation, connect the ground wire first and disconnect it last when dismantling.
- The equipment is only designed to be used in an enclosure with restricted access (IP30 control cabinet), and to be installed on a concrete surface or any other non-combustible surface.
- The product can be installed horizontally or vertically.
- Sufficient convection must be guaranteed (minimum top and bottom clearance space 30 mm).
- The wires must be dimensioned and protected according to the maximum input/output current ( $\geq 0,15 \text{ mm}^2/\text{A}$ ).
- Observe the thermal and mechanical limits.
- For prolonged storage or disconnection, press the stop button back-up function. (see on Figure 4.2 in chapter 4.4: Disconnect backup push-button)
- The backup is maintenance-free. Do not open it.

## 2. Directives and environment and public health protection

---

The SLAT company and its product comply with directives and are committed to protecting the environment and public health.

SLAT manufactures all its products in accordance with RoHS and WEEE environmental directives.



SLAT products are qualified by CE. The CE mark dates back to 2011.



## 3. General Information

---

### 3.1 The company

To meet its customers' requirements more effectively:

- SLAT has been designing and manufacturing all its products in accordance with the ISO 14001 standard v15.
- SLAT recycles its products at the end of their life cycle, by means of its recycling program. (For end-of-life recycling, the backup can easily be removed by qualified professionals independent from SLAT.)

### 3.2 Purpose of the document

The operating instructions provide the information necessary for the positioning, the connection, the configuration and the operation of the **SDC-M** equipment.

These instructions are also available in PDF format in the Library Account at [www.slat.com](http://www.slat.com).

### 3.3 Related documentation

The following documents are associated with these operating instructions:

- Installation manual
- Commercial brochure
- Datasheet

This documentation is available at [www.slat.com](http://www.slat.com).

### 3.4 Intended audience

The operations described in this document should be performed only by authorized trained staff.

### 3.5 Indicator labels

This document comprises three types of important notices.

The type of notice informs you of the potential consequences in the case of non-compliance with the instructions.

These consequences are not exhaustive and are sorted in order of ascending risk:



**IMPORTANT REMARK!**

Contains additional information. Non-compliance will not cause damage to equipment or personal injuries.

---



**CAUTION!**

Equipment and goods can be seriously damaged or people seriously injured if the precautions for use are not followed.

---



**DANGER!**

Non-compliance may result in serious injury or death.


---

## 4. The product

### 4.1 Description

**Micro-UPS with lead and cadmium-free "Smart Backup Inside" with very long service life.**

SDC-M are communicating Micro **UPS (Uninterruptible Power Supply)** of the Safe DC range dedicated to Smart Building applications. They ensure the continuity of service of the equipment they supply and maintain communication with the supervisor in the event of a power failure.

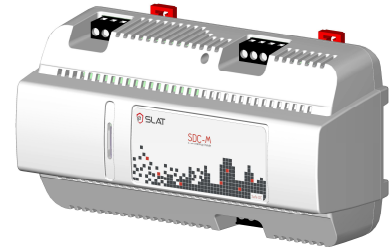

#### Main functions

- Keeps control of the Smart Building in case of a power failure or glitch.
- Filters electromagnetic disturbances.
- Avoids the reporting of false alarms to the supervisor due to network glitches.
- Delivers a constant voltage to equipment.
- Choice of configuration in either Modbus or BACnet MS/TP via the website [www.slat.com](http://www.slat.com).

#### Built-in functions

- Operates in power-saving mode when the backup is charged.
- Micro stealth mode with controllable operational maintenance.
- Indicates the % of remaining autonomy.
- 2 SDC-M can be configured in parallel without accessories for an increase in power, to increase the backup duration or a 100% redundancy.
- Provides selectivity of electrical protections of the equipment.

#### Benefits of the SDC-M range

- Ultra-compact / Plug and Play, parallel configuration without accessories.
- Performs self-diagnostic and that of its environment.
- Lead-free, cadmium-free backup, 100% recyclable.
- Service life of more than 10 years.

### 4.2 Operating principle

When the network is operating, the emergency power supply SDC-M stores energy and continuously powers the load.

When the mains fail, the built-in emergency supply continues to provide power to the load.

in the event of a complete discharge, the recharging time to 100% of the backup will in all cases be less than 20 hours of mains presence.

### 4.3 Schematic diagram

The visual below shows the product diagram when installed:

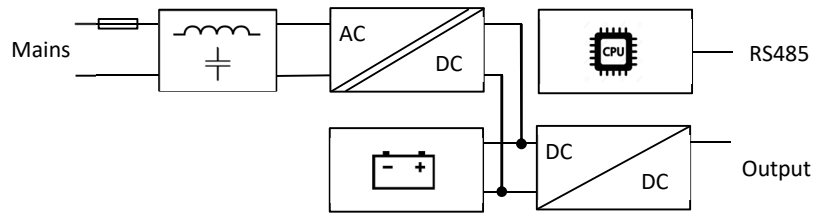


Figure 4.1: Schematic diagram

### 4.4 Product view

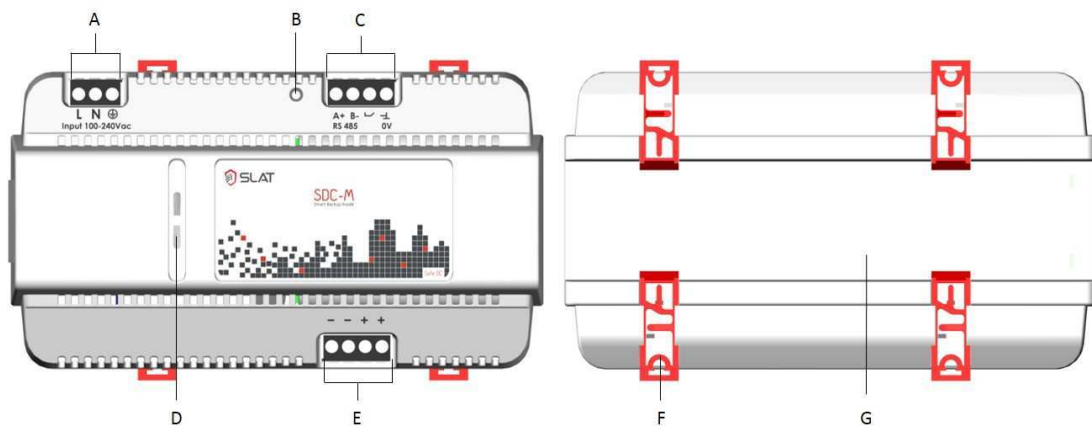


Figure 4.2: Product view

	Name	Use
A	Mains input	Mains input
B	Disconnect backup push button	The push button is used to switch off the power supply once the mains power is cut.
C	RS485 communication + alarm report	Communication uses an RS485 serial connection and the Modbus or BACnet MS/TP protocol to retrieve detailed product information (see chapter 8.2.2). The alarm report output is an open collector dry contact that indicates whether there is a fault on the product (see chapter 8.2.1).
D	Status light (LED)	The light indicates the product status (see chapter 8.1).
E	Outputs	User voltage outputs
F	Clip	Attachment to clip the box to the DIN rail or to fix it on a mounting plate (depending on the clip's position)
G	Rail attachment	Attachment to fix the box to the DIN rail.

Table 4.1: Elements on the product faces

## 4.5 Available references

The list of available product references is to be found at [www.slat.com](http://www.slat.com).

The references are designed as follows:

SDC- M 12V 2 D DMR RS  
 ①    ②    ③    ④    ⑤    ⑥    ⑦

Meaning	
1	Range name
2	Application type
3	Output voltage [12 V / 24 V DC]
4	Power range [2 → 30 W]
5	Backup type [D] (see Table 5.1)
6	Box type
7	Type of communication port

*Table 4.2: Meaning of the references*

## 4.6 Scope of delivery

The product is delivered with its installation manual.

## 4.7 Associated products

A setup cable is available with the following reference: **A SETUP KIT SAFE DC RS**

## 5. Energy storage

### 5.1 Available storage option

SLAT products are combined with batteries or backup systems. They are used as emergency supplies in the event the mains voltage disappears. The available autonomy then depends on the capacity of the built-in backup.

In the **SDC-M** the backup system is already built-in (Smart Backup Inside). For the DMR version of the SDC-M, one backup pack is available:

Backup D
20 Wh

Table 5.1: Backup option

### 5.2 Technology

The technology behind the SDC-M backup is Lithium-Iron-Phosphate ( $\text{LiFePO}_4$ ).  $\text{LiFePO}_4$  has the best safety characteristics of any Lithium storage system (see Figure 5.1). This includes better resistance to impacts and extreme temperatures.

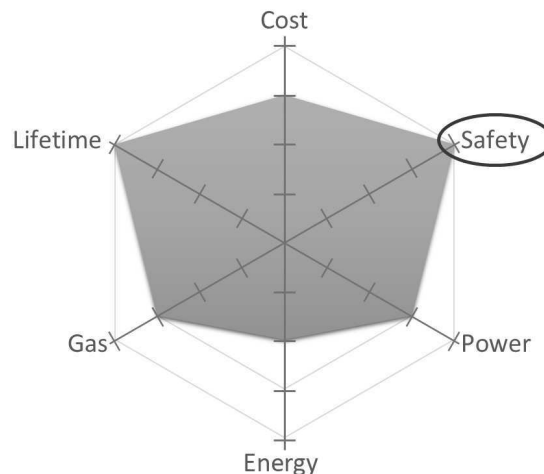


Figure 5.1:  $\text{LiFePO}_4$  characteristics

All SDC-M backups have the following characteristics:

- Lithium-Iron-Phosphate technology ( $\text{LiFePO}_4$ )
- No risk of thermal runaway
- Storage: 9 months without recharging
- 10 year service life @ 25°C
- Lead-free, cadmium-free, 100% recyclable

### 5.3 Autonomy curves

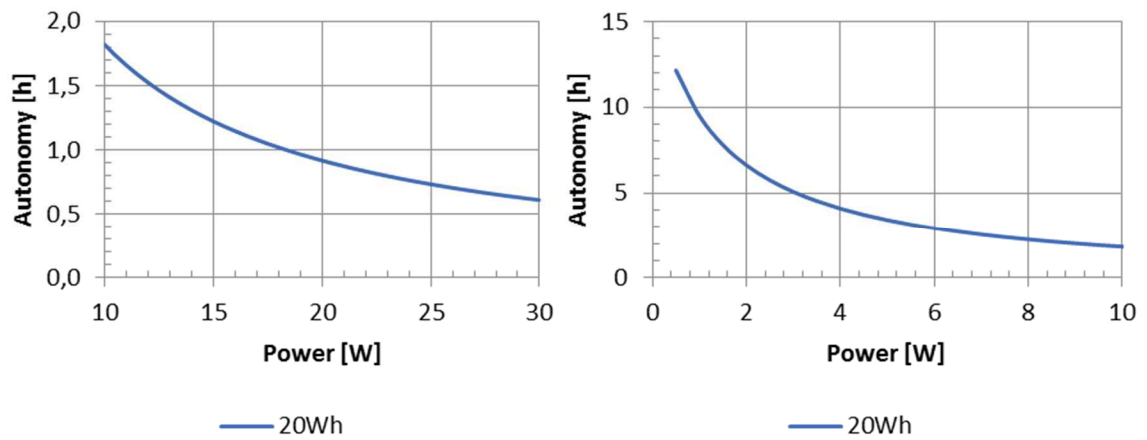


Figure 5.2: Autonomy curves

### 5.4 Autonomy duration

Backup D	
Operating power	Autonomy expressed in hours and minutes
5 W	3h23
7 W	2h32
10 W	1h48
15 W	1h13
20 W	0h55
25 W	0h44
30 W	0h36

Table 5.2: Autonomy vs Power vs used Backup

### 5.5 Self-discharge

The self-discharge current for the SDC-M is 70 mA.

## 6. Installation

### 6.1 Positioning / Installation on support

The product must be installed according to the EN 60950-1 standards.



**DANGER!**

This product must be installed in a control cabinet meeting the requirements of the IP30 standards.

#### Assembly instructions

The DMR box of the SDC-M is designed to be fixed to a DIN rail or to a mounting plate in a control cabinet:

1. DIN rail
  - a. Open the two lower mounting clips (red parts) by pushing them outwards with the help of a flat-head screwdriver.
  - b. Position the top part of the attachment (on the rear of the product) on the top part of the rail, tilting the product backwards. Make sure the two upper mounting clips are placed behind the rail.
  - c. Place the product in a straight position on the DIN rail and close the lower clips, opened in section (a.), again.
  - d. The product should hold itself. Figure 6.1 shows how the box must be positioned on the DIN rail once assembled.

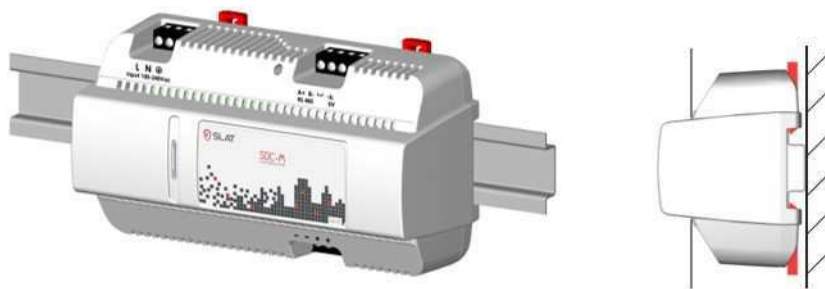


Figure 6.1: Position on DIN rail



**CAUTION!**

To prevent the product from falling, make sure it is securely attached to the bottom and top of the rail!

2. Mounting plate
  - a. Open the four mounting clips (red parts) by pushing them outwards with the help of a flat-head screwdriver so that they are in the position shown in Figure 6.2.
  - b. Attach the product in the way indicated in Figure 6.2 using four screws.

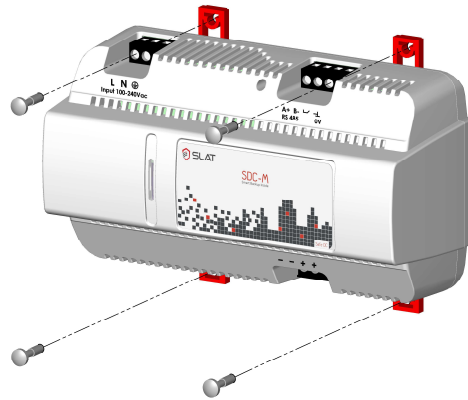


Figure 6.2: Position on mounting plate

## 6.2 Connection

### 6.2.1 Connection specifications

Mains	0.75 mm <sup>2</sup> ... 2.5 mm <sup>2</sup>
User output	0.75 mm <sup>2</sup> ... 2.5 mm <sup>2</sup>
Communication/ alarm report	0.2 mm <sup>2</sup> ... 2.5 mm <sup>2</sup>
Length to be stripped	7 mm
Tightening torque	0.5 Nm ... 0.6 Nm
Connections	Screw terminals

Table 6.1: Connection specifications



#### **DANGER!**

The wire sectional area must be chosen according to the operating current.

### 6.2.2 Wiring

After installing the product on its support, the wiring must be carried out. In this way the emergency power supply (the product) is connected with the application, the control point and the mains. Symbols have been placed on the product (above or below the screw terminals) to indicate the name of the signal / wire so as to facilitate connection (see also Figure 6.3)

#### **Wiring methods**

All the wires are attached to the product using a screw terminal (the three black parts on Figure 6.3). They have to be connected according to the symbols indicated on the product, using a regular screwdriver



#### **CAUTION!**

To avoid breaking the screw terminal, comply with the screw tightening torque indicated in Table 6.1.


**CAUTION!**

To avoid wiring mistakes, make a careful note of the positioning of the screw terminals and their respective symbols.

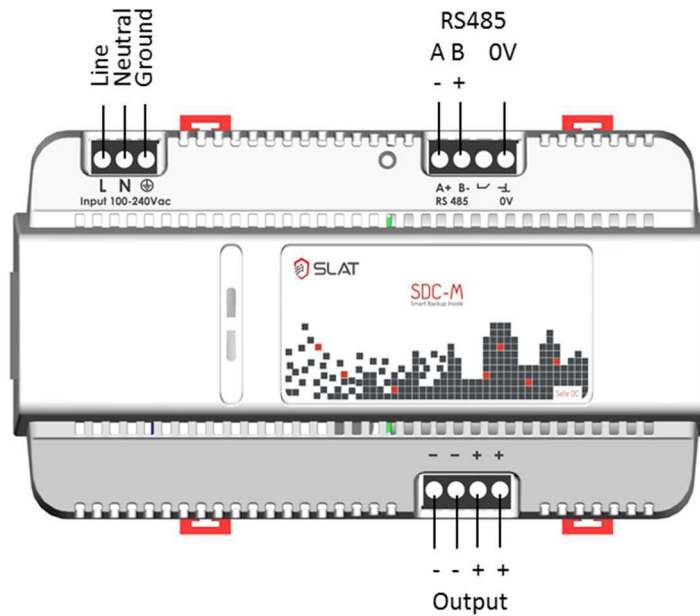


Figure 6.3: Wiring

**Connection**

**DANGER!**

To connect the wires, the application must be switched off. The upstream circuit-breaker of the application must be open!

The wires are connected according to the following steps:

1. Connect the emergency power supply to the application  
The product is connected to the application by the four-point screw terminal located on the bottom right. The initial output voltage is set to the rated value.
2. Connect the RS485 communication cable and the alarm report contacts  
The four-point screw terminal located on the top right provides the connection to an external PLC or computer.
  - To allow RS485 communication the wires must be connected to the **A, B and 0V** contacts.
  - To connect the alarm report, the wire must be connected to the 3<sup>rd</sup> contact (with the switch symbol ).
3. Connect the power supply to the mains  
Below the three-point screw terminal (top left), the type of wire is indicated by 3 symbols:
  - L Line wire
  - N Neutral wire
  - ⊕ Ground wire

**DANGER!**

**Before connecting the power supply to the mains, the ground wire must be connected!**

---

After connecting the ground wire, the neutral and line wires can be connected.

Once the connections have been made, the upstream circuit-breaker can be closed. To complete the installation, the LED status must be verified to be green.

## 7. Commissioning

Before starting to commission the power supply, check that the LED is green. This means the product is connected properly and ready to function.

### Software configuration

The basic communication protocol is Modbus. It can be configured in BACnet MS/TP using the configuration software with the help of an optional setup cable (see chapter 4.7).

The communication parameters can be configured via the RS485 serial connection. SLAT provides a software that allows simple configuration of these parameters. This software is available for download at [www.slat.com](http://www.slat.com).

The configuration software also makes it possible to choose to use the power supply in energy saving mode (ECO) and in stealth mode.

The ECO Mode, once it is activated, allows the improvement of the power supply's efficiency's at low load (<20% of  $I_{max}$ ) while ensuring an autonomy percentage. This one can be chosen during the configuration. The ECO Mode is factory set with a threshold of 80% of the available autonomy (see Figure 7.1).

The Stealth Mode allows the supervisor, using a Modbus or BACnet order, to disconnect the product to relieve the mains. The product reconnects himself automatically once the remaining backup autonomy reaches the guaranteed percentage chosen by the user during the configuration step.

### 7.1 First configuration

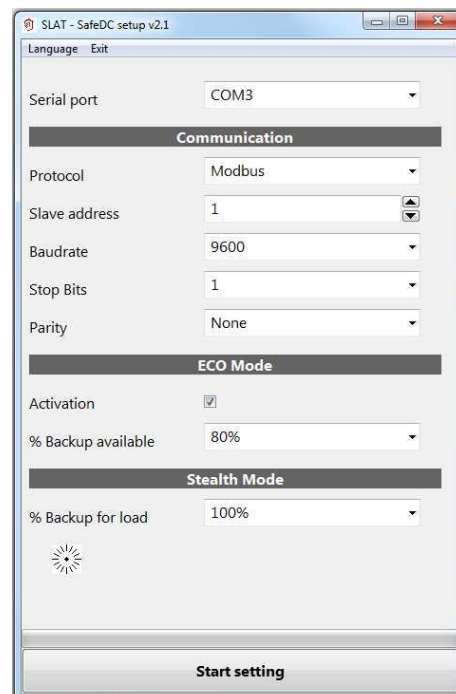


Figure 7.1: Configurator

Figure 7.1 and the following paragraph explain how to set up the communication and the mode in which it is used. To set up the product, it must be powered up and connected to the PC via the RS485 serial connection.

The configurator is available in three languages (French, English, German). The default language is French. It can be changed using the menu "langue" (language) in the top on the left.

By default, the product is factory pre-set. These settings are shown in Figure 7.1.

To start the configuration, first the serial port, that the SDC-M is connected to, has to be chosen.

**Communication:**

1. Choose the communication protocol (Modbus or BACnet MS/TP).
2. Choose the product's slave address, address 1 to 254 for the Modbus or for the BACnet.
3. Choose the communication speed from the available values:  
9600 bauds / 19200 bauds / 38400 bauds / 57600 bauds / 115200 bauds
4. Choose the number of stop bits: 1 or 2
5. Choose the parity: None / Even / Odd

**ECO Mode**

Choose that the ECO Mode should be active by checking the box. If the ECO Mode is activated, choose the percentage of the Backup autonomy, which has to be available for the user: 50% / 60% / 70% / 80%

**Stealth Mode**

Choose the percentage Backup for load, which is the guaranteed autonomy time once the Stealth Mode is used: 25% / 50% / 75% / 100% (100% of Backup for load means the Stealth Mode is not activated.)

## 7.2 Subsequent configurations

If you need to change the configuration after the first configuration, you must reset the product parameters. To do that, follow this procedure:

- The mains power must be present.
- Press the disconnect backup push button for 10 seconds (see Figure 4.2) to return to the factory configuration (the status LED changes temporarily its colour) and then reconfigure the product following the steps described above (chapter 7.1).

## 8. Operation

During use, it is possible to interact with the product. There are two types of communication - local report and/or remote report.

### 8.1 Local report on product

#### LED status

The product communicates its status via a state LED on the front. Figure 4.2 in chapter 4.4 indicates the position of this LED on the product. The LED indicates the different statuses of the product by its colour and state. The table explains the meanings of each status.

Colour	Mode	
Green	steady	Normal mode
	slow flashing	Eco mode or Stealth mode
Orange	slow flashing	Backup mode
	fast flashing	Installation fault Overcurrent, short circuit Low output voltage (product overloaded) Power supply temperature too high No mains (outside specified power supply range) End of backup imminent
Red	steady	UPS to be changed If no output voltage If power supply out of order (charger fault)
		Backup fault Emergency supply undervoltage Emergency supply overvoltage

Table 8.1: LED status

### 8.2 Remote report

#### 8.2.1 Alarm reports

An open collector dry contact exists for the alarm report. It gives an indication that a fault is present on the product. If there are no faults, the contact remains closed. In the event of a fault, the contact opens.

Fault contact specifications:

- Max voltage 60 V DC / max current 1.1 A
- Signal:  
“mains fault” or “backup fault” or “output overload” or “output short-circuit” or “charger fault” or “pre-alarm end of autonomy”

## 8.2.2 Communication

When using the product, it is possible to communicate with it from a distance using the incorporated communication system. The serial connection makes it possible to:

- retrieve information remotely,
- have more details about the types of faults,
- communicate analogue values (operating voltages and currents, remaining backup percentage, internal temperature, autonomy),
- configure the power supply.

The product communicates its information on an RS485 serial connection via the Modbus or BACnet MS/TP protocol. The protocol activated by default is Modbus. It can be configured using a software SLAT makes available at [www.slat.com](http://www.slat.com). The information and explanations on how to configure the product are described in chapter 7.

### Modbus protocol

The information available via the Modbus protocol is organized as follows:

16-bit input variables (input register) accessible only in read mode (modbus function code 4):

Name	Modbus address	Model	Conversion of analogue / digital values
Software Revision	0	Software version	
U <sub>out</sub>	1	Output voltage	$U_{out}[V] = U_{out}[bit]/64$
I <sub>out</sub>	2	Output current	$I_{out}[A] = I_{out}[bit]/320$
Reserve	3		
Reserve	4		
Autonomy	5	Remaining autonomy percentage	
Temperature	6	Internal temperature	Until firmware version 970 $T[°C] = (1801 - T[bit])/5.337$
			From firmware version 971 $T[°C]$ (direct reading)
Default*	7	Fault variable	For details of the faults see Table 8.3

Table 8.2: Modbus input register

* Description of the "Fault" variable		
Bit	Type of fault	Decimal value
15	Reserve	32768
14	Reserve	16384
13	Pre-alarm end of autonomy	8192
12	Backup fault	4096
11	Charger fault	2048
10	Mains fault	1024
9	Output overload	512
8	Output short-circuit	256
7	Temperature too high	128
0 - 6	Reserve	-

Table 8.3: Description of the "Fault" variable

16-bit output variables (holding register) accessible for read (modbus function code 3) / write (modbus function code 6):

Name	Modbus address	Model
Product Serial Number LSB	0	Card Serial Number
Product Serial Number MSB	1	
Stealth Mode	2	Variable making it possible to activate the stealth mode to reduce the network load while guaranteeing minimum autonomy (once the guaranteed autonomy is reached, it automatically returns to 0) If 1: Stealth Mode in progress If 0: Normal functioning

Table 8.4: Modbus holding register

### BACnet MS/TP protocol

The information available via the BACnet MS/TP protocol is organized as follows:

Property	Remark / Value	RW
Object_Identifier	device, default instance: 9540 + Network-Address	RW-E
Object_Name	Max. 40 Bytes, "SDC-M" default	RW-E
Object_Type	DEVICE (8)	R
System_Status	OPERATIONAL (0)	R
Vendor_Name	"SLAT"	R
Vendor_Identifier	954	R
Model_Name	"SDC-M"	R
Firmware_Revision	"0.975"	R
Application_Software_Version	"1.0"	R
Protocol_Version	1	R
Protocol_Revision	12	R
Protocol_Services_Supported	read-property, write-property, who-has, who-is, device-communication control	R
Protocol_Object_Types_Supported	DEVICE, BINARY_OUTPUT, BINARY_INPUT, GROUP, ANALOG_VALUE	R
Object_List [9]	device, analog-value 1 ...7	R
Max_APDU_Length_Accepted	480	R
Segmentation_Supported	NO_SEGMENTATION (3)	R
APDU_Timeout	3000	R
Number_Of_APDU_Retries	3	R
Device_Address_Binding	-	R
Database_Revision	0	R
Serial Number	Serial number	R
R: Read Property, W: Write Property, -E: Storage in EEPROM / Flash		

Table 8.5: BACnet MS/TP variables

Analog Value Object 1		
Property	Remark / Value	RW
Object_Identifier	analog-value 1	R
Object_Name	"Vout"	R
Object_Type	ANALOG_VALUE (2)	R
Description	"Output Voltage"	R
Present_Value	default 0	R
Status_Flags	IN_ALARM: 0	R
	FAULT: 0	
	OVERRIDDEN: 0	
	OUT_OF_SERVICE: 0	
Event_State	NORMAL (0)	R
Out_Of_Service	FALSE (0)	R
Units	Volts (5)	R
R: Read Property, W: Write Property, -E: Storage in EEPROM / Flash		

Table 8.6: Analog Value Object 1

Analog Value Object 2		
Property	Remark / Value	RW
Object_Identifier	analog-value 2	R
Object_Name	"Iout"	R
Object_Type	ANALOG_VALUE (2)	R
Description	"Output current"	R
Present_Value	default 0	R
Status_Flags	IN_ALARM: 0	R
	FAULT: 0	
	OVERRIDDEN: 0	
	OUT_OF_SERVICE: 0	
Event_State	NORMAL (0)	R
Out_Of_Service	FALSE (0)	R
Units	Amperes (3)	R
R: Read Property, W: Write Property, -E: Storage in EEPROM / Flash		

Table 8.7: Analog Value Object 2

Analog Value Object 3		
Property	Remark / Value	RW
Object_Identifier	analog-value 3	R
Object_Name	"Vbatt"	R
Object_Type	ANALOG_VALUE (2)	R
Description	"Battery Voltage"	R
Present_Value	default 0	R
Status_Flags	IN_ALARM: 0	R
	FAULT: 0	
	OVERRIDDEN: 0	
	OUT_OF_SERVICE: 0	
Event_State	NORMAL (0)	R
Out_Of_Service	FALSE (0)	R
Units	Volts (5)	R
R: Read Property, W: Write Property, -E: Storage in EEPROM / Flash		

Table 8.8: Analog Value Object 3

Analog Value Object 4		
Property	Remark / Value	RW
Object_Identifier	analog-value 4	R
Object_Name	"Ibatt"	R
Object_Type	ANALOG_VALUE (2)	R
Description	"Battery current"	R
Present_Value	default 0	R
Status_Flags	IN_ALARM: 0	R
	FAULT: 0	
	OVERRIDDEN: 0	
	OUT_OF_SERVICE: 0	
Event_State	NORMAL (0)	R
Out_Of_Service	FALSE (0)	R
Units	Amperes (3)	R
R: Read Property, W: Write Property, -E: Storage in EEPROM / Flash		

Table 8.9: Analog Value Object 4

Analog Value Object 5		
Property	Remark / Value	RW
Object_Identifier	analog-value 5	R
Object_Name	"Temperature"	R
Object_Type	ANALOG_VALUE (2)	R
Description	"Internal temperature"	R
Present_Value	default 0	R
Status_Flags	IN_ALARM: 0	R
	FAULT: 0	
	OVERRIDDEN: 0	
	OUT_OF_SERVICE: 0	
Event_State	NORMAL (0)	R
Out_Of_Service	FALSE (0)	R
Units	Degree Celsius (62)	R
R: Read Property, W: Write Property, -E: Storage in EEPROM / Flash		

Table 8.10: Analog Value Object 5

Analog Value Object 6		
Property	Remark / Value	RW
Object_Identifier	analog-value 6	R
Object_Name	"fault"	R
Object_Type	ANALOG_VALUE (2)	R
Description	"fault register"	R
Present_Value	default 0	R
Status_Flags	IN_ALARM: 0	R
	FAULT: 0	
	OVERRIDDEN: 0	
	OUT_OF_SERVICE: 0	
Event_State	NORMAL (0)	R
Out_Of_Service	FALSE (0)	R
Units	No units (95)	R
R: Read Property, W: Write Property, -E: Storage in EEPROM / Flash		

Table 8.11: Analog Value Object 6

Analog Value Object 7		
Property	Remark / Value	RW
Object_Identifier	analog-value 7	R
Object_Name	"Gauge"	R
Object_Type	ANALOG_VALUE (2)	R
Description	"Remaining autonomy"	R
Present_Value	default 0	R
Status_Flags	IN_ALARM: 0	R
	FAULT: 0	
	OVERRIDDEN: 0	
	OUT_OF_SERVICE: 0	
Event_State	NORMAL (0)	R
Out_Of_Service	FALSE (0)	R
Units	No units (95)	R
R: Read Property, W: Write Property, -E: Storage in EEPROM / Flash		

Table 8.12: Analog Value Object 7

Analog Value Object 8		
Property	Remark / Value	RW
Object_Identifier	analog-value 9	R
Object_Name	"StealthMode"	R
Object_Type	ANALOG_VALUE (2)	R
Description	"Set to relieve the mains power"	R
Present_Value	Stealth Mode On 1 – Stealth Mode Off 0	RW
Status_Flags	IN_ALARM: 0	R
	FAULT: 0	
	OVERRIDDEN: 0	
	OUT_OF_SERVICE: 0	
Event_State	NORMAL (0)	R
Out_Of_Service	FALSE (0)	R
Units	No units (95)	R
R: Read Property, W: Write Property, -E: Storage in EEPROM / Flash		

Table 8.13: Analog Value Object 8

## 9. Maintenance and troubleshooting

---

### Maintenance

The product has been designed to function for a long period of time without requiring maintenance. To ensure the best level of service, it is essential to install it in a dry dust-free location, or to provide for cleaning and maintenance operations.



#### **IMPORTANT REMARK!**

**Maintenance must only be performed by qualified personnel.**

---



#### **DANGER!**

**At no time should the box be opened, even for maintenance purposes.**

---

For a proper functioning of the product, it is necessary to ensure that the ventilation grilles are dust-free.

## Troubleshooting

During installation, commissioning or use, unexpected situations may arise. In the event of a problem, the table below can be consulted. It contains a list of possible problems with their corresponding causes and solutions.

Problem	Fault via communication	Cause	Solution
The product does not start; the UPS DC status LED remains off.	No communication	The mains voltage is not connected or is not present.	Check if the mains voltage is connected properly.
		The mains voltage fuse is not connected or is not present.	Product replacement.
The UPS DC status LED is orange + flashes quickly and there is no voltage at the output.	Output short-circuit	Output overload or short-circuit.	Disconnect the load from the output until the load is less than the maximum output current (see Table 10.4).
The UPS DC status LED is red; the output voltage is OK.	Backup fault	Backup malfunction; the backup is disconnected or has failed.	Product replacement.
	Backup fault	Charger malfunction.	The charger has failed. Product replacement.
	Charger fault		
The UPS DC status LED is orange + flashes quickly and the output voltage is less than the normal value.	Output overload	There is a slight overload.	Lower the output load until the current is less than the maximum output value (see Table 10.4).
The UPS DC status LED is orange + flashes quickly, and the output voltage is OK.	Temperature too high	Temperature is too high because the ambient temperature does not fulfil the conditions specified in Table 10.7.	Cool the installation.
		The air intake is blocked.	Clean the blocked air intake.
The UPS DC status LED is green and there is no communication.	No communication	Unsatisfactory communication connection.	See connection details chapter 6.2.2 (Figure 6.3).
	No communication	Unsatisfactory communication configuration.	Use the communication configuration software to enter the right parameters.

Table 9.1: Problems, causes and solutions

For additional technical assistance, contact the SLAT hotline +33 4 78 66 63 70.

For an RMA request (authorization to return goods), refer to chapter 11.2 .

No equipment may be returned without prior issuance of an RMA number.

## 10. Technical data

### 10.1 Electrical characteristics

#### 10.1.1 Electric power supply characteristics

Mains input	
AC network voltage	99 V ... 264 V
DC network voltage	140 V ... 375 V
Frequency	45 Hz ... 65 Hz
Class	1
Inrush current	limited by CTN
Neutral system	TT, TN, IT
Primary short-circuit protection	Short-circuit on the primary power supply by a slow-blow fuse on the phase.
Characteristics of built-in fuse	2.5 A (slow-blow, internal)
Shock wave protection	Differential mode by varistor and filter
Primary current @ 94 V	0.8 A
Primary current @ 264 V	0.3 A
Circuit breaker to be provided upstream	Curve C or D (recommended rating 2 A)

Table 10.1: Mains input electrical characteristics

#### Current behaviour:

##### Inrush current at start-up

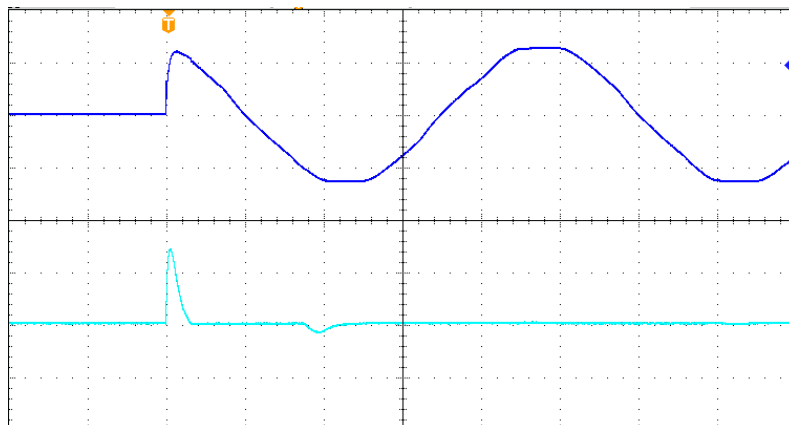


Figure 10.1: Oscillogram - inrush current

Test conditions	
Input voltage	240 V AC
Output current and voltage	12 V DC; no load
Ambient temperature	+20°C
Description of the diagram	
Upper curve	Input voltage (250 V / DIV)
Lower curve	Input current (20 A / DIV)
Time scale	4 ms / DIV

Table 10.2: Description of the oscillogram - inrush current

#### Start-up sequencing

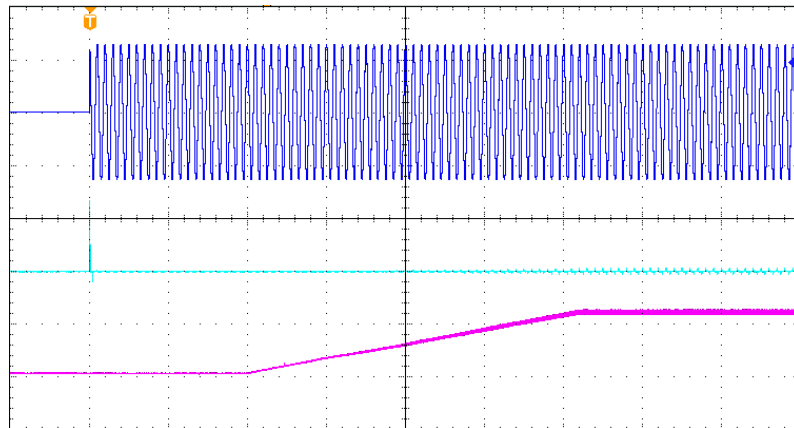


Figure 10.2: Oscillogram - starting behaviour

Test conditions	
Input voltage	240 V AC
Output current and voltage	12 V DC ; 2.5 A
Ambient temperature	+20°C
Description of the diagram	
Upper curve	Input voltage (250 V / DIV)
Medium curve	Input current (20 A / DIV)
Lower curve	Output voltage (10 V / DIV)
Time scale	200 ms / DIV

Table 10.3: Description of the oscillogram - starting behaviour

### 10.1.2 Electrical output characteristics

Output		
Two user outputs	constant DC voltage	
Rated voltage $U_n$	12 V	24 V
Rated output current $I_n$	2.5 A	1.25 A
Permissible peak currents	5 A / 3.5 ms	2.5 A / 2 ms
	12.5 A / 1.6 ms	6.25 A / 0.5 ms
Voltage precision	1%	
Available output power	30 W	
Power limitation	from $P_{max}$ to $P_{max}+10\%$ for output voltage $> 6$ V	
HF ripple peak-peak (20 MHz-50 $\Omega$ )	$< 4\%$ of $U_n$	
Effective LF ripple	$< 0.5\%$ of $U_n$	
Static and dynamic regulation characteristics	$< 5\%$ of $U_n$ for cumulative variations of the mains and the load (from 10 to 90%)	
Protection	electronic (no fuse)	
$\eta$ @ 20% of use load	90%	
$\eta$ @ 75% of use load	93%	
$\eta$ @ 100% of use load	92%	
Protection against output short-circuit	by power supply cut with cyclical restart	
Protection against surges in user output	deregulation or connection error, by cut-off with cyclical restart if output voltage $> U_n + 10\%$	
Short-circuit if	$U_{output} < 6$ V or $I > 30$ A	

Table 10.4: Electrical output characteristics

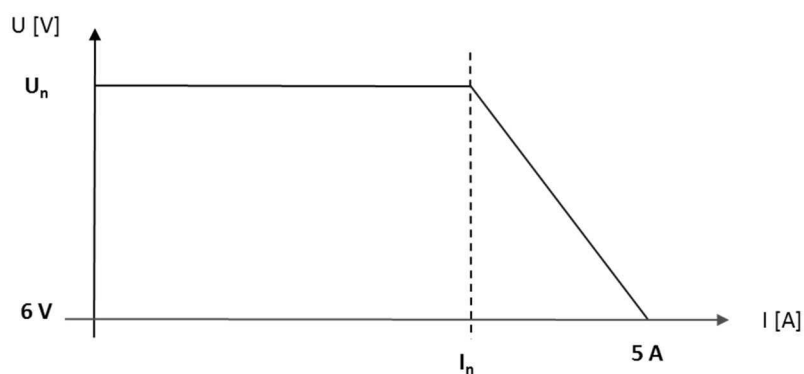


Figure 10.3: Output voltage vs User current

### 10.1.3 Functional characteristics

A user output permanently supplies a constant voltage (12 V DC or 24 V DC) to the equipment which has to be powered. In the event of a current break, the built-in backup maintains the electrical power supply of the equipment connected to the UPS for the duration defined when the SDC-M was chosen.

An asynchronous RS485 serial connection retrieves the information remotely and communicates the analogue values (voltages and load current, backup, autonomy, internal electronic temperature)

The basic communication protocol is Modbus The configuration software supplied on the web site [www.slat.com](http://www.slat.com), makes it possible via an RS485 cable to choose the BACnet MS/TP protocol, to configure the communication parameters and to choose the functioning mode.

An open collector dry contact for the alarm report (60 V DC/1.1 A) and a status LED on the front panel are also available.

The Stealth Mode function makes it possible to shed load from the network while guaranteeing backup autonomy.

### 10.1.4 Peak current

The figure and table below show the maximum peak current duration in ms for an output voltage > 80%  $U_n$ .

	12 V	24 V
$I/I_n$	Time [ms]	
5	1.5	1
3	2	1.2
2	3.5	2
1.5	7	6
1.2	30	20
1.1	100000	100000

Table 10.5: Overload capacity

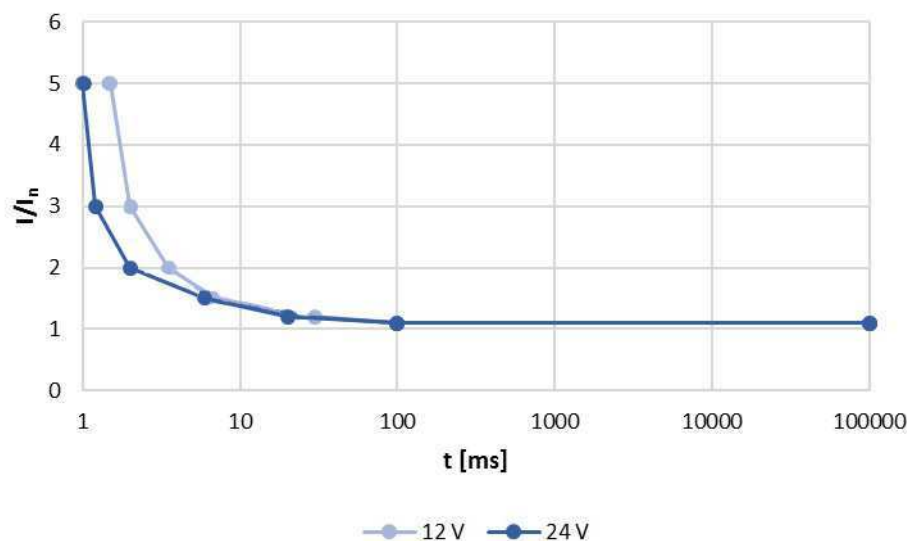


Figure 10.4: Overload capacity curve

## 10.2 Mechanical characteristics

Mechanical specifications	
Envelope	ABS
Protection rating	IP20
Size	W 161 x H 92 x D 65 mm
Weight	0.5 kg
Installation	Box to be attached to a DIN rail or to a mounting plate

Table 10.6: Mechanical specifications

## 10.3 Environmental specifications

Environmental specifications		
Storage temperature		-25 ... +60°C
Operating temperature	at 100% load	-5 ... +55°C
	at 75% load	-5 ... +60°C
Relative humidity	in storage	10 ... 95%
	operating	20 ... 95%
Altitude	Above 2,000 m, the temperature decreases by 5% every 1,000 m.	

Table 10.7: Environmental specifications

## 10.4 Standards

The product is designed to meet with LV and EMC directives (immunity and emission). It complies with the following standards:

### 10.4.1 Safety standards

Section	Standard number	Title/Content
LVD Safety	EN 62368-1 (2014)	Audio/video, information and communication technology equipment - Part 1: Safety requirements.

Table 10.8: Safety standards

### 10.4.2 EMC standards

Section	Standard number	Title/Content
Immunity	EN 61000-6-1 (March 2007)	Immunity for residential, commercial and light-industrial environments (generic standard)
Immunity	EN 61000-6-2 (January 2006)	Immunity standard for industrial environments (generic standard)
Emissions	EN 61000-3-2 (August 2006) (class A)	Limits for harmonic current emissions (equipment input current $\leq 16$ A per phase)
Emissions	EN 61000-6-3 (March 2007)	Emission standard for residential, commercial and light-industrial environments (generic standard)
Emissions	EN 61000-6-4 (March 2007)	Emission standard for industrial environments (generic standard)
Emissions	EN 55032 (2015) (class B)	Electromagnetic compatibility of multimedia equipment

Table 10.9: EMC standards

## 11. Warranty and Product Returns

---

### 11.1 Warranty

The equipment is guaranteed for three years from the date of delivery (ex-works). It is strictly limited to reimbursement or replacement (at our discretion and without compensation of any sort) of parts recognized as faulty by our services, following the return of the product to our premises at the buyer's expense. The replacement or repair of equipment is possible only on our premises. In order to allow our customers to benefit from the latest technical improvements, SLAT reserves the right to make all necessary modifications to its products.




---

#### **IMPORTANT REMARK!**

**Mechanical opening of the product cancels the manufacturer warranty!**

---

### 11.2 Product Returns

#### 11.2.1 Product under warranty

For the maintenance of your products under warranty, SLAT offer the best solution to facilitate your repairs and minimize lead times:

- Contact the Customer Service department using the form available on our web site [www.slat.com](http://www.slat.com) , taking care to fill in all the required fields.
- The RMA form will be processed and sent back by the SLAT account manager.
- After receiving your RMA form, return two copies with your product(s), one INSIDE the package and the other on the OUTSIDE of the package for warehouse identification purposes, thereby guaranteeing traceability of your product.
- The repaired or replaced product(s) will be returned within a maximum of 15 business days.

### 11.2.2 Product not under warranty

SLAT offers 2 solutions for maintenance of its products:

#### **QUICK AND EASY: Personal replacement of the equipment**

It is not necessary to send the equipment back to SLAT.

Order the maintenance cards at the applicable price. The reception will take place within one week. Contact the SLAT Sales Department for advice by completing the contact form (available at [www.slat.com](http://www.slat.com)).

The new cards are guaranteed for 1 year.

#### **Product repair by SLAT**

Contact Customer Service at [service.client@slat.fr](mailto:service.client@slat.fr), making sure to provide all of the following information:

- Last name/First Name
- Company / Complete Address / Phone / Email
- Exact model of the product (indicated on the product label) / SLAT reference (indicated on the product label, code number) / Serial No. / Quantity / Problems(s) encountered (describe the faults encountered with the product)

The form to request the RMA number is also available at [www.slat.com](http://www.slat.com).

The account manager will send the RMA form by email together with a quote according to the relevant product range.

After receiving your RMA form, return two copies with your product(s), one INSIDE the package and the other on the OUTSIDE of the package for warehouse identification purposes, thereby guaranteeing traceability of your product. The repairs will be made only after the receipt of the accepted quote together with the repair order form. If the quote is rejected, please return it to [service.client@slat.fr](mailto:service.client@slat.fr) marked "refused" and specify whether the equipment should be destroyed or returned in its existing condition (in this case a charge of €150 will be invoiced for handling costs).

The repaired or replaced product(s) will be returned within a maximum of 15 business days. A new 3 month warranty is attributed to the relevant product.

**Conditions: Authorization to return products is issued by SLAT.**

**An RMA number is assigned to each product to be returned. Each RMA number is valid for 30 days.**

**No equipment may be returned without prior issuance of an RMA number.**







**SLAT**

**11, Rue Jean Elysée Dupuy BP66  
69543 Champagne au Mont d'Or Cedex  
FRANCE**

**Tel.: +33 478 66 63 60**

**Fax: +33 478 47 54 33**

**e-mail: [comm@slat.fr](mailto:comm@slat.fr)**

**SLAT GmbH**

**Leitzstraße 45  
70469 Stuttgart  
Deutschland**

**Tel.: +49 711 899 890 08**

**Fax: +49 711 899 890 90**

**E-mail: [info@slat-gmbh.de](mailto:info@slat-gmbh.de)**



**[www.slat.com](http://www.slat.com)**